

GEFORCE® GTX™ SMALL FORM FACTOR PCs THE ART OF GAMING



INSTRUCTIONS


EACH PACK HAS 5 SHEETS OF VINYL EACH COMPRISED OF 3 LAYERS

1. THE TOP LAYER IS THE THIN APPLICATION LAYER
2. THE MIDDLE LAYER IS THE VINYL GRAPHIC
3. THE BOTTOM LAYER IS THE THICK BACKING PAPER



STEP 1: THE SURFACE MUST BE DRY & THOROUGHLY CLEAN.


STEP 2: PLACE THE SHEET WITH APPLICATION LAYER FACE DOWN. USE YOUR CUSTOM CARD TO WIPE OVER THE ENTIRE SHEET USING PLENTY OF PRESSURE. THIS WILL STICK THE VINYL TO THE APPLICATION LAYER AND RELEASE IT FROM THE BACKING PAPER.

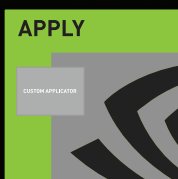

STEP 3: REMOVE THE THICK BACKING PAPER ENSURING THE VINYL HAS COMPLETELY ADHERED TO THE APPLICATION LAYER.

STEP 4: POSITION APPLICATION LAYER WITH VINYL FACE DOWN IN THE DESIRED AREA ON YOUR PC CHASSIS.

STEP 5: USING THE CUSTOM CARD APPLY LIGHT PRESSURE TO ENTIRE VINYL AREA.

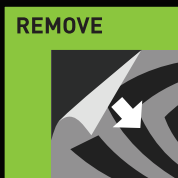

STEP 6: LEAVE FOR 10 MINUTES.

STEP 7: ONCE SECURELY ATTACHED TO THE SURFACE, REMOVE THE APPLICATION LAYER STARTING FROM ANY CORNER. RUB ENTIRE VINYL WITH A SOFT DRY CLOTH CAREFULLY.



THE ART OF GAMING



TO CREATE THE DESIGN ABOVE:

YOU WILL NEED TO USE THREE OUT OF THE FIVE SHEETS OF VINYL. APPLY EACH SHEET OF VINYL ONE BY ONE IN STAGES. ONCE ALL THREE ARE APPLIED, YOU WILL HAVE CREATED A BEAUTIFUL LAYERED DESIGN.

ALTERNATIVELY:

APPLY THE VINYL THE WAY YOU WANT THEM AND CREATE THE ULTIMATE FULLY CUSTOMISED AND PERSONAL PC DESIGN. THERE ARE THOUSANDS OF DIFFERENT WAYS YOU CAN APPLY THEM TO TURN YOUR PC INTO A PIECE OF ART.

